


Single Station Low-Level Alarm Model LLA

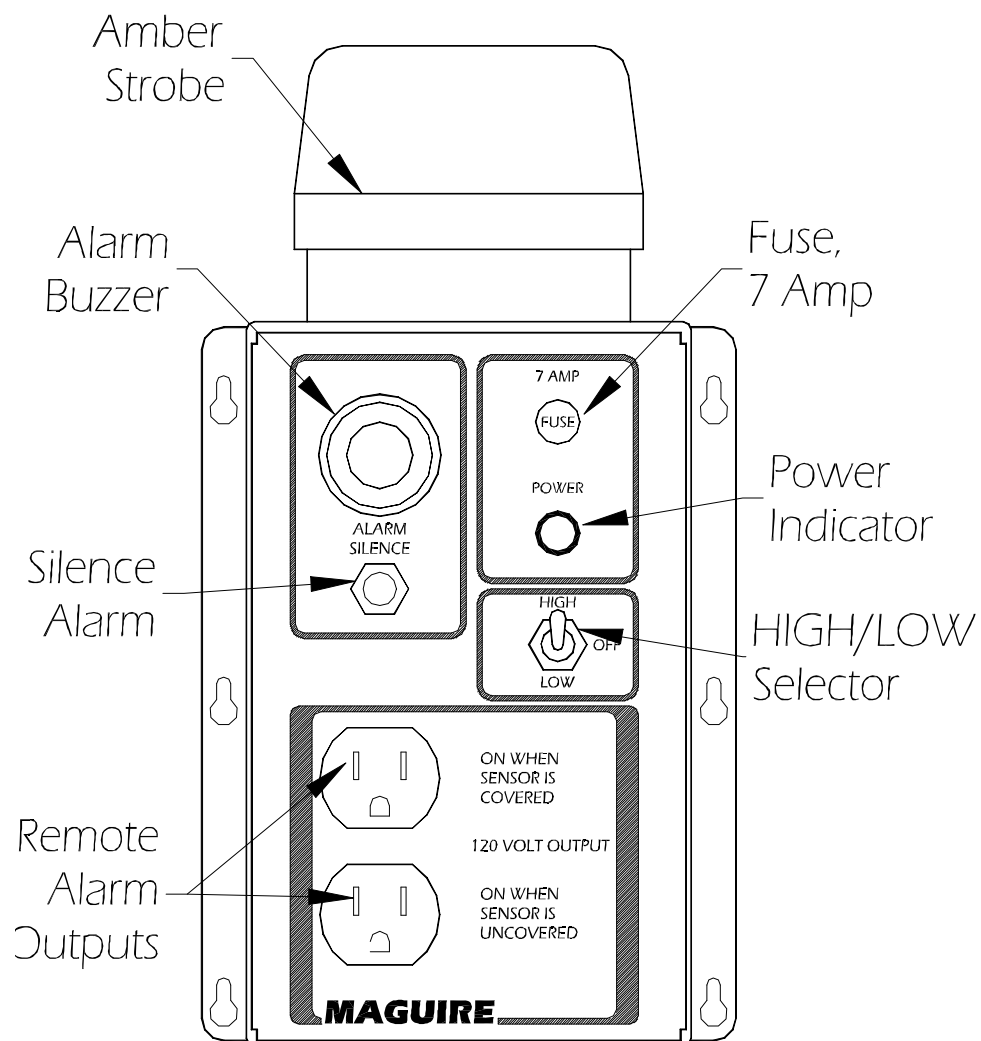

Amber Strobe

Strobe flashes when alarm condition is met.

Alarm Buzzer

Audible alarm sounds when alarm condition is met.

Silence Alarm

Push-button switch silences audible alarm until the NEXT TIME alarm condition exists.

Fuse

Seven amp fuse, protects remote alarm outputs.

Power Indicator

Lights when selector switch is set to either HIGH or LOW.

HIGH/LOW Selector Switch

Defines alarm condition:

HIGH – Alarm sounds when sensor is COVERED.

LOW – Alarm sounds when sensor is UNCOVERED.

Remote Alarm Outputs

Supply power to external alarms if desired:

TOP RECEPTICLE – Energized when sensor is COVERED.

BOTTOM RECEPTICLE – Energized when sensor is UNCOVERED.