

MAGUIRE

G2 Server/Client Installation for Windows

When the G2 CD-ROM is inserted into the CD-ROM drive the installation of the G2 Server should automatically start. If, however, it does not auto start, and you would like to install the G2 Server/Client Software click the start button and choose "Run". Type the following replacing CDRom with your CD-ROM's drive letter: "CDROM:\setup.bat" to install the Server/Client software. Click "OK". Proceed to step 1 below.

1. Select your language for the installation. Selecting the language will also default G2 to starting with this language.
2. Read the welcome message and click *Next*.
3. Choose the destination folder that G2 will be installed in. By default the directory is c:\g2. To change the directory, click Browse. After selecting the folder, click next.
4. Choose your system setup. Each part of the G2 Software may be selected independently. Choices are *Server, Client, Satellite ComServer and Demo*. After making your selections choose *Next*.
5. Select your data directory. By default this location is C:\g2\g2data. This may be changed if necessary. Click *Next*.
6. Select your computer's operating system and click *Next*.
7. You may choose or create the Program folder in the start menu that G2 will appear in. By default that folder is Gravimetric Gateway. Click *Next*. The G2 program will now install.
8. Click *Finish*.
9. If you have installed the G2 Client/Server for the first time, please read section VII, G2 Server, G2 Server Demo Operation on page 18 of the G2 Manual.
 - If you are upgrading with a full install of G2 and want to use your existing databases, copy all database files **EXCEPT "language.data"** and **"language.key"** from the original database location (by default, c:\g2data for version 1.2.x) to the new location, c:\g2\g2data by default. An installation of G2.x or later over an existing 2.0.x will use the same default location of the G2 databases (c:\g2\g2data) and will not be overwritten by the new installation.

To read more about the operation of the Gravimetric Gateway Server for Windows please read section VII, G2 Server Operation of the G2 manual located on this CD-ROM. For information on how to use the G2 Clients please read section IX, Client Operation and Administration.